

LR460

French Door System

INSTALLATION GUIDE



FORTEseries




HSE REGULATIONS



Check List

- Personal **protective equipment**
- Work **tools**
- Tools **conditions**
- Safety **precautions**
- Cleanliness **area**

TOOLS & MATERIALS

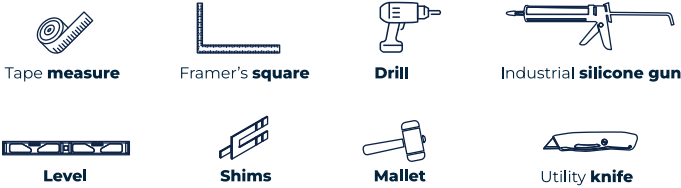

Introduction

- The **LR460** system is a French door system.
- This guide illustrates the correct way to install the system
- Please follow all the steps carefully.
- If you have any questions, **please contact LINEA ROSSA**
- This installation guide is intended as a general reference only.**

Extra Installation Notes

- Transport boxes with suitable support to avoid spoilage. If forklift is used, bind boxes when lifting or moving. Be especially careful about bumping.
- After all materials are received, in terms of quantity and quality should be checked, in case of any mismatch in shipment should be reported to the authority immediately.
- Installation instructions are of a general nature and will cover any conditions you may encounter. May not be covered. Shop drawings and/or assembly manuals specially prepared.
- If you have any questions about the installation, Please contact the official for clarification before proceeding

WARNING

Cleaning
Chemicals



Spot test is recommended before using any **cleaning agent and abrasive type cleaners should never be used.**

After the product is accepted and received by the contractor, any damage or **installation problems are no longer the responsibility of LINEA ROSSA.**

CONTENTS OF LR-460 PACKAGE



✓ **Assembly Screw**



✓ **Cover Profile**



✓ **Screw Cover Profile**




Please ! Follow the Chart **A, B for frame profiles**, it may be different from the above table



Make sure the following materials are included in the package

Inspection

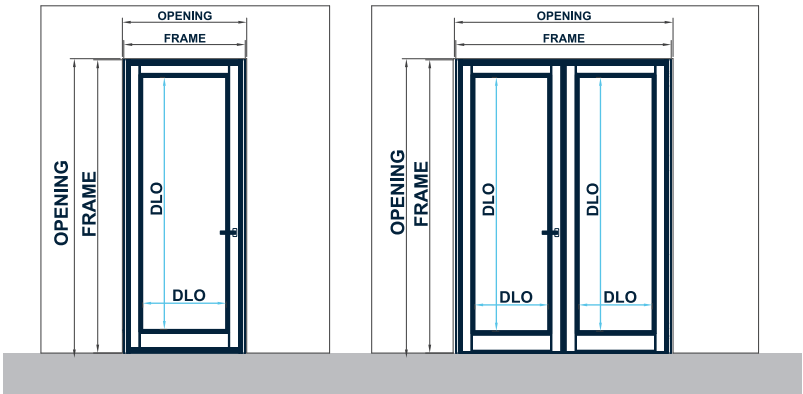

- The rough opening should be checked for the correct size as determined by dimensions listed in the architectural specifications an the shop drawings.
- Measure rough opening in several places to determine variations.
- Check all the material upon arrival for quantity and damage.

LR460


French Door System

INSTALLATION GUIDE




FORTEseries


Frame Connection

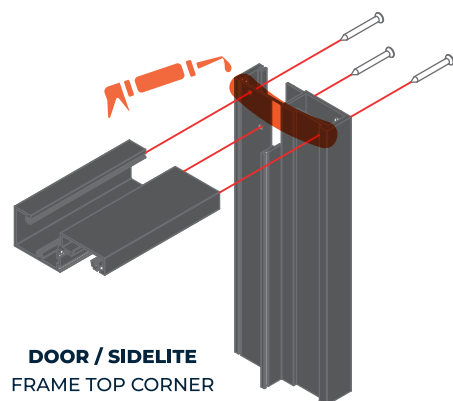

DOOR / SIDELITE
FRAME TOP CORNER


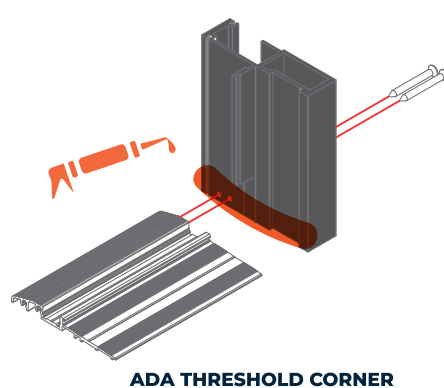


ADA THRESHOLD CORNER


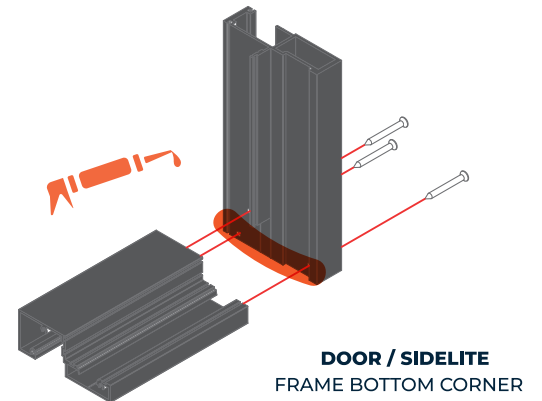


DOOR / SIDELITE
FRAME BOTTOM CORNER


STEP 1

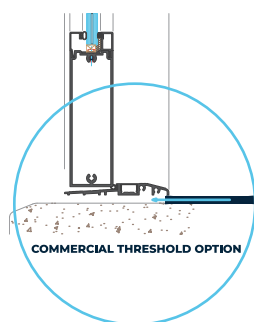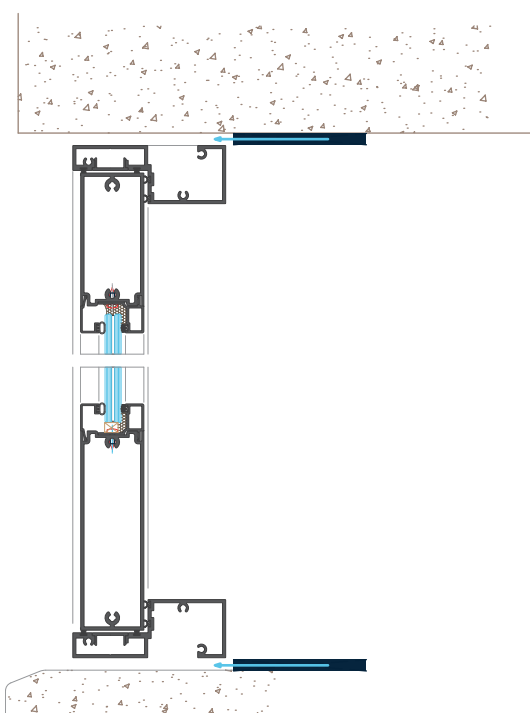


COMMERCIAL THRESHOLD OPTION

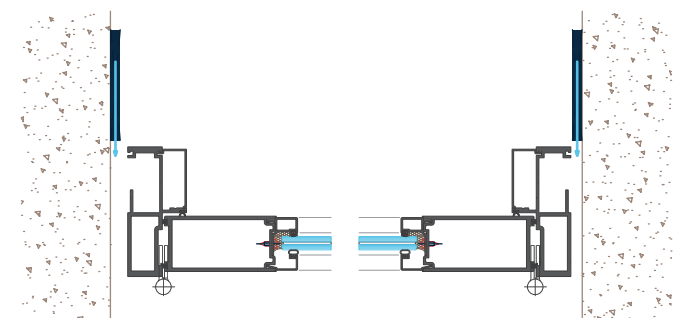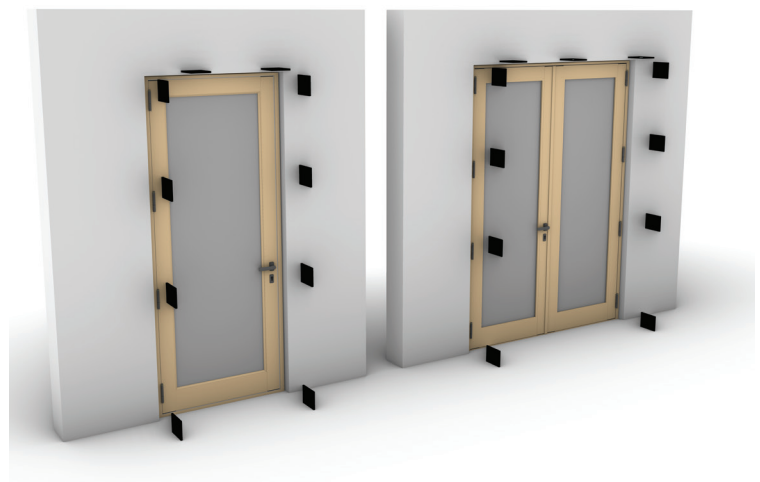

STEP 2A

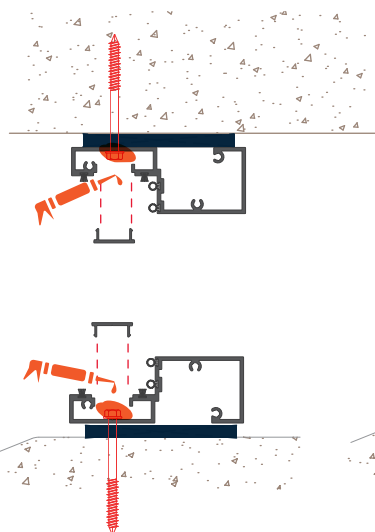



COMMERCIAL THRESHOLD
OPTION

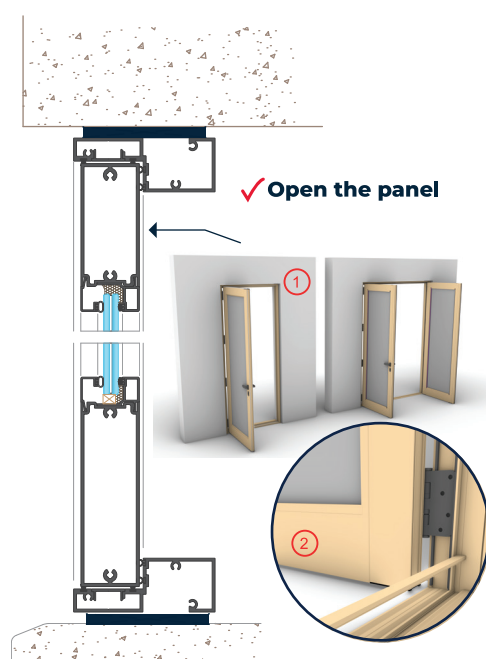

✓ Open the panel

✓ Open the panel

STEP 2B

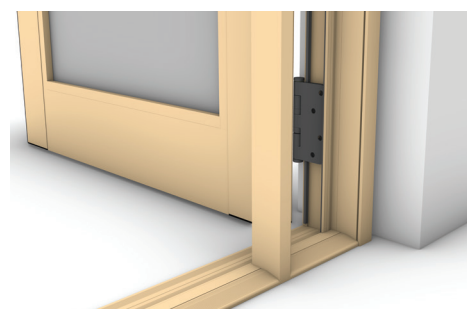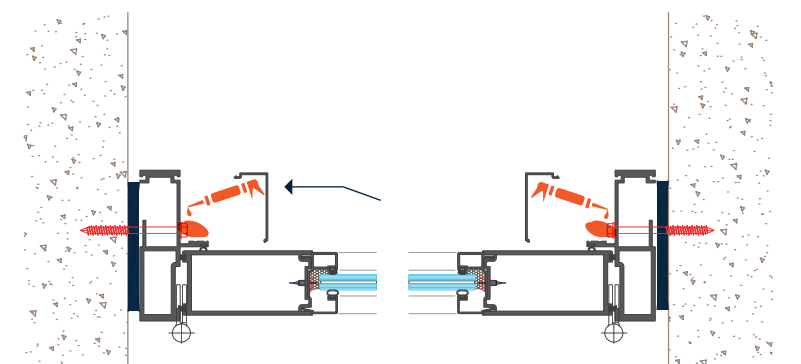

• This installation guide is intended as a general reference only.

WINDOWS | DOORS | FACADE **LINEA ROSSA®**

ES EN

PAGE 2 ►►

www.linearossadesign.com

LR460


French Door System

INSTALLATION GUIDE



FORTEseries

STEP 3

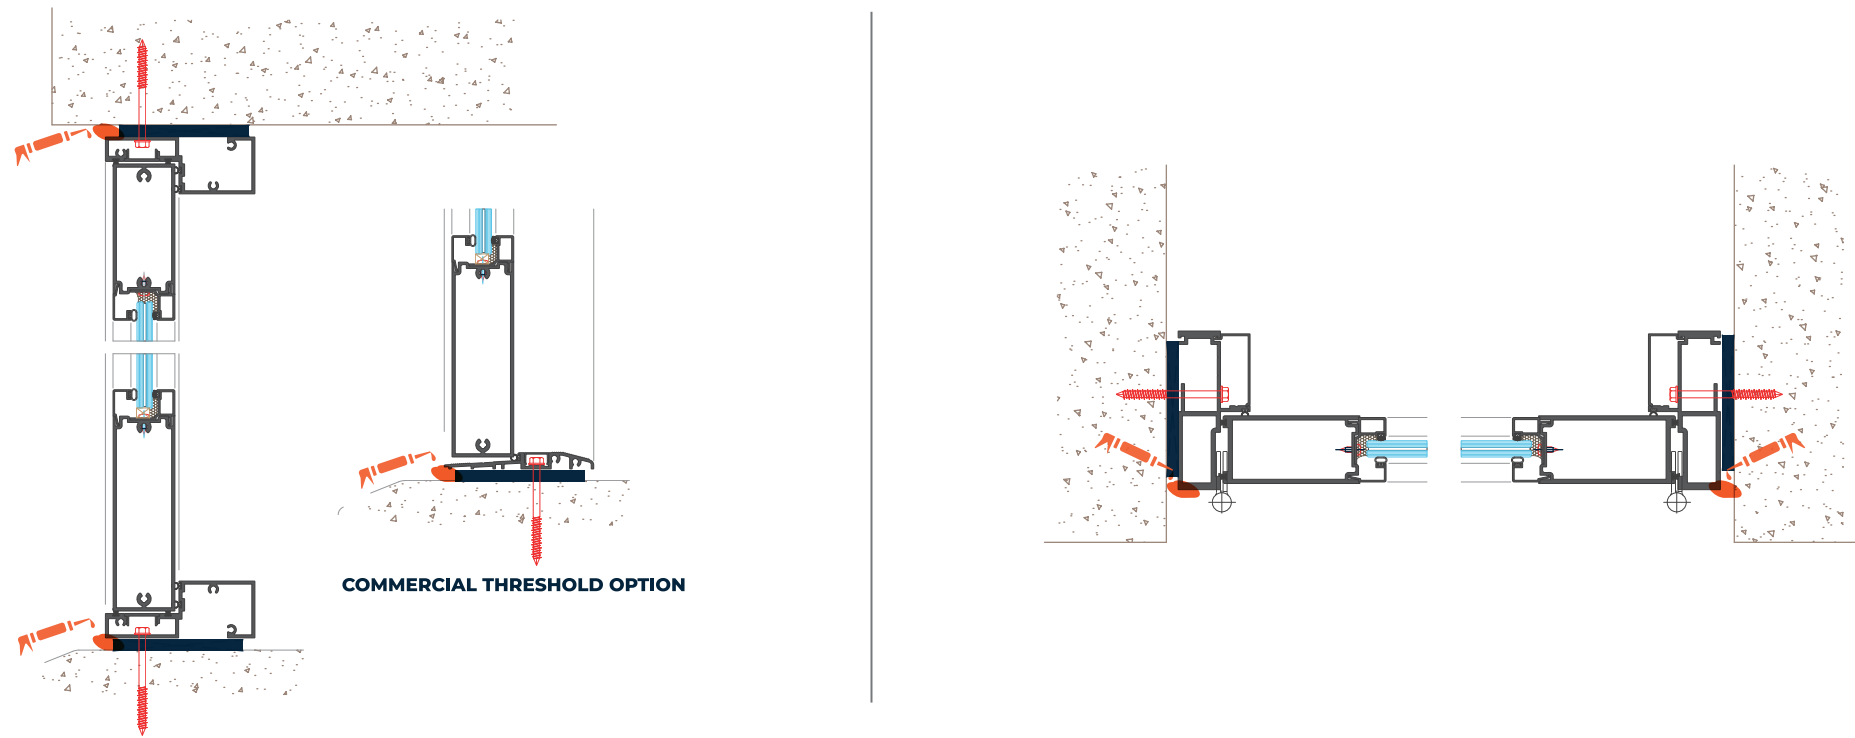

FINAL

✓ Complete the interior and exterior sealants between the mounting location and the unit as in the shop drawing.



• This installation guide is intended as a general reference only.